

Operating Manual

Realistic Pro 2006

*

Commтел Com 205



PROGRAMMING THE PRO-2006 SCANNER

1. Select a channel to program by pressing [MANUAL], and entering the channel number you want to program. Then, press [PROGRAM]. "PROGRAM" appears in the display to indicate that your scanner is in the programming mode.
2. Enter a frequency. Good references for active frequencies are Radio Shack's "Police Call Guide Including Fire and Emergency Services," "Official Aeronautical Frequency Directory", and "Maritime Frequency Directory". We update these directories every year, so be sure to get a current copy.
3. Press [ENTER] to store the frequency. If you make a mistake in Step 2, ERROR appears on the display and three beeps sound. Press [CLEAR] and repeat Step 2.
4. Press [DELAY]. If you want your scanner to pause after each transmission before scanning to the next channel, press [DELAY]. "DELAY" appears in the display. If you do not want your scanner to pause, press [DELAY] again. "DELAY" disappears from the display.
5. To program more channels, repeat Steps 1-4. If you want to program the next channel in sequence, just press [PROGRAM] and proceed to Step 2.

SEARCHING FOR AND TEMPORARILY STORING ACTIVE FREQUENCIES

If you do not have a reference to frequencies in your area, use these procedures to search for a transmission. See also "A Guide to the Action Bands".

LIMIT SEARCH

The limit search procedure allows you to search within a range of frequencies. You can store up to ten limit search ranges in the search banks.

1. Press [PROGRAM], and the search bank number in which you wish to store the limit search range. Press [0] for bank number 10.
2. Press [LIMIT]. "L" and the search bank number appears in the display.
3. Enter the lower limit of the frequency range. Press [ENTER].
4. Press [LIMIT]. "L" changes to "H" in the display.
5. Enter the upper limit of the frequency range. Then, press [ENTER].
6. Repeat steps 1-5 to store the limit search range into the search banks. You can store up to 10 limit-search ranges.
7. To recall a limit-search range, press the appropriate bank number.
8. Press [UP-ARROW] to search from the upper limit down to the lower limit. Or, press [UP-ARROW] to search upward starting from the lower limit.

9. When the scanner stops on a transmission, press [MONITOR] to store the frequency in the current monitor memory. The memory number flashing on the display indicates the current monitor memory.
10. Press [UP-ARROW] or [DOWN-ARROW] to continue the search.

NOTES: Press [SPEED] to speed up or slow down the search.

Press [DELAY] to make the scanner pause 2 seconds after a transmission, before proceeding to the next frequency.

LIMIT SEARCH MEMORY

When you change your scanner's mode from limit search to manual, program, scan, direct search, and so on, your scanner retains the last frequency before you change the mode. Your scanner resumes the search from that frequency when you change the mode to limit search again.

NOTE: You can change the upper or lower limit frequency without affecting the memorized frequency if the frequency is within the new limit range. If the frequency is out of the new limit range, the search starts from the new upper or lower limit frequency.

DIRECT SEARCH

1. Select a currently programmed channel by pressing [MANUAL], and the channel number. Then, press either [MANUAL] or [PROGRAM].
2. Press [DIRECT]. The step frequency appears in the display.
3. Press [UP-ARROW] to search through higher frequencies or press [DOWN-ARROW] to search through lower frequencies.
4. When the search stops on a transmission, press [MONITOR] to store that frequency in the current monitor memory. The memory number flashing on the display indicates the current memory number. To continue the search, press [DOWN-ARROW] or [UP-ARROW].

NOTES: When you press [DIRECT] during limit, your scanner enters direct search mode.

When you press a numeric key during a direct search, your scanner changes to limit search mode. The key you press corresponds with the limit-search bank number.

MOVING A FREQUENCY FROM A MONITOR MEMORY TO A CHANNEL

As you store frequencies in monitor memories, the memory number flashing on the display shows the current monitor memory. You can listen to monitor memories by press [MANUAL], [MONITOR], then the number of the monitor memory you wish to listen to.

If there is a frequency you wish to transfer to a channel, follow these steps to move it from a monitor memory

1. Press [MANUAL]. Enter the channel number you want to store the monitor frequency in; then press [PROGRAM].
2. Press [MONITOR] and enter the monitor memory number that has the frequency you want to move.
3. Press [ENTER]. The scanner stores the monitor frequency in the channel.

If you want to return to a limit search after this procedure, press [LIMIT], and the search bank number. Then, press either [UP-ARROW] or [DOWN-ARROW] to continue searching.

USING THE RESTART SWITCH

The scanner's display might lock up the first time you plug in and turn on your scanner, or if the battery is left out for an extended period of time. If the display locks, use a pointed object, like a paper clip, to press and release the restart switch while power is on.

To clear all the memories, be sure the scanner is turned on and:

1. Press and hold [CLEAR].
2. Using a pointed object, press and release the restart switch.
3. After confirming that the display goes blank, release [CLEAR].

SETTING THE VOLUME AND SQUELCH

Follow these steps to set the volume and squelch.

1. Turn VOLUME clockwise and SQUELCH counterclockwise until you hear a hissing sound.
2. Adjust VOLUME to a comfortable sound level.
3. Slowly rotate SQUELCH clockwise until the hissing stops.

NOTE: If the scanner picks up unwanted, partial, or very weak transmissions, rotate SQUELCH clockwise to decrease the scanner's sensitivity to these signals.

USING THE SOUND SQUELCH SWITCH

If the scanner stops at a transmission during scan, search, or priority modes, the [SOUND SQUELCH] switch lets the scanner start scanning again if the transmission contains no sound (carrier only without modulated signals).

If your scanner stops at a frequency that has no sound, press [SOUND SQUELCH]. The indicator lights. If the scanner detects no sound within 0.5 seconds, it goes to the next transmission.

When the scanner receives a frequency that contains sound, it halts at the frequency. If the sound ceases, the scanner stays on the frequency for 5 seconds, and then resumes scanning. If the carrier stops, the scanner begins to scan immediately if the delay function is off, or after 2 seconds if the delay function is on.

To cancel sound squelch, press [SOUND SQUELCH] again. The indicator goes off.

NOTE: If a frequency contains a transmission with low modulation, the sound squelch circuit might not work properly.

SCANNING THE CHANNELS

To begin scanning the channels, just press [SCAN]. Your scanner scans through all the channels that you have not locked out of the banks that are turned on. Set SQUELCH so that you do not hear hissing sounds between transmissions.

Be sure to read the following sections to get the full benefits from all of your scanner's special features.

USING THE DELAY FEATURE

Many agencies use a two-way radio system that might have a pause of several seconds between a query and a reply. To program a delay into that channel to keep from missing a reply, select the channel and press [DELAY] so DELAY appears on the display.

When your scanner pauses at an active channel which has been programmed with a delay, while scanning, it waits for 2 seconds after the completion of each transmission on that channel before it resumes scanning.

Some radio systems, especially those above 800 MHz, use a special "trunked" system. In these systems, the transmitter selects an available frequency each time the operator keys the radio. Therefore, it is possible for the query to be on one frequency and the reply on another. To ensure the best possibility of hearing the full reply, you want the scanner to begin scanning immediately when the first transmission ends. In this case, select the channel manually and ensure that "DELAY" is not in the display. If "DELAY" is indicated, press [DELAY] to turn off this feature for that channel.

SETTING THE SCANNING SPEED

While you are in scan or search mode, you can press [SPEED] to select the scanning speed.

The scanner has 2 different scanning speeds:

13 channels per second

26 channels per second

LOCKING OUT CHANNELS

You can increase the effective scanning speed by locking out specific channels that you have not yet programmed. Manually select the empty channel and press [L/OUT] so that "LOCK OUT" appears on the display. This is also handy for locking out channels you have programmed that have a continuous transmission. You can still manually select locked-out channels.

To unlock a channel, manually select the channel and press [L/OUT], Or, press [L/OUT RVW] in manual or program mode to call out locked-out channels one by one. Then, press [L/OUT] again.

NOTE: There must be at least one active channel in each bank. You cannot lock out all channels.

TURNING BANKS ON AND OFF

As explained in "Understanding Channel Storage Banks and Search Banks" your scanner splits the 400 channels into ten banks of forty channels each. The small bars under the numbers at the top of the display are the bank indicators. You can turn each bank on and off, so that all the channels in a bank are either scanned or locked out. In scan mode, press the number key for the bank you want to turn on or off. If the bank indicator is on, you have turned on the bank and the scanner scans all the channels within that bank that you have not locked out. If the indicator is off, the scanner does not scan any of the channels within that bank. You can still manually select any channel in a bank, even if you have turned off the bank. You cannot turn off all banks - one must be turned on.

PRIORITY

You can scan through the programmed channels, and still not miss an important or interesting call on a specific channel. To program a stored channel as the priority channel, press [PRI] during scanning. The scanner now checks the priority channel every two seconds, and stays on the channel if there is any activity.

To turn on the priority feature, press [PROGRAM] and the desired channel number. Then press [PRI]. "P" appears on the display whenever the scanner is set to the priority channel. You can only program one channel as the priority channel. If you program a new channel as the priority channel, the previous channel you chose is automatically cleared.

To turn off the priority feature, press [PRI] until "P" disappears from the display.

NOTE: Channel 1 is automatically designated as the priority channel the first time you turn on your scanner.

MANUALLY SELECTING A CHANNEL

You can continuously monitor a specific channel without scanning. This is useful if you hear an emergency broadcast on a channel and do not want to miss any details-even though there might be periods of silence-or if you want to monitor only a locked-out channel.

Follow these steps to manually select a channel.

1. Press MANUAL.
2. Enter the channel number.
3. Press MANUAL again.

Or, if the scanner is scanning and stops at the desired channel, press MANUAL one time. (Pressing MANUAL additional times causes the scanner to step through the channels.)

DIMMER

Press [DIMMER] to turn the display's backlight down or up.